

Mat Clean Tread™ Maintenance Instructions



8333 Boyle Parkway, Twinsburg, Ohio 44087
800-321-3827 Toll Free - info@kadeeindustries.com

Models: KDCM, KDVM

MAINTENANCE INSTRUCTIONS - ALUMINUM ROLLOUT MATS

It is important to begin a regular maintenance schedule when the mat is new. This schedule will vary depending on the location and amount of traffic to which the mat is exposed.

Surface cleaning

1. Carpet inserts

- Vacuum daily for areas that have heavy traffic, or as often as required based on traffic volume.
- When vacuuming will no longer remove soil:
 - a) Blot liquid spills with a clean, absorbent cloth or sponge.
 - b) Scrape semi-solid spills with a spoon or spatula, then blot with clean, absorbent cloth or sponge.
 - c) To prevent the spot from spreading, it is important to work from the outside of the spot into the center.
 - d) If spot removers are used, always test carpet for color fastness.

2. Vinyl inserts

- Daily or weekly mopping with mild soap and water is recommended.

Under-side cleaning

1. Use a commercial cleaner (shop-vac) from the surface.

Removal of Mat (for cleaning recess)

1. Depending on the size of the unit, the mat may be :
 - Rolled up completely and lifted clear of the recess area.
 - Rolled up partially so that the recess can be cleaned in stages.
 - Lifted out unrolled, however this should only be done on smaller sizes.
2. In all cases, care must be taken to not twist, tear or break the vinyl hinges.

Inspect grating regularly

1. The frequency of inspection is dependent on the location and amount of traffic in the area.
2. Check to ensure that the mat panels are level (co-planer with adjoining flooring) and obstruction-free.
3. Inspect the carpet inserts regularly to help prevent permanent stains.